

## What are Favorite Channels?

Favorite Channels let you find your favorite shows quickly. You can scroll through only your Favorite Channels, skipping the channels in between.

For this to work, you have to set up a **Favorite Channels** list.

## Setting Favorite Channels

### *Set Channels One at a Time*

1. You can set up a **Favorite Channel** while you are watching it. When you find a channel you want to mark as a **Favorite**, press **SETTINGS** on your Digital Remote to display the **Quick Settings** menu on your TV screen.
2. Press the **UP** or **DOWN** arrows to find “**Make This Channel a Favorite**” in the **Quick Settings** menu.
3. Press the **LEFT** arrow to select the **YES** option.
4. Press **C** to return to your show.

### *Set Several Channels at Once*

1. You can also set a list of **Favorite Channels** at the same time. Press **SETTINGS** on your Digital Remote to display the **Quick Settings** menu, and then press **A** to display the **General Settings** menu.
2. Press the **UP** or **DOWN** arrows to find **Favorite Channels**. Then press **SELECT**.
3. Press the **UP** or **DOWN** arrows to find the channels you want.
4. For each channel you want to select as a favorite, press **SELECT**. A star will appear next to that channel, marking it as a favorite.
5. A list of the channels you have selected appears on the right-hand side of the screen under the heading, **CURRENT FAVORITES**. You can choose as many **Favorite Channels** as you want.

## *Remove a Channel From Your List*

You can remove a channel by highlighting it in the channel list and pressing **SELECT**.

## *Finishing Your List*

When you are finished, press **EXIT** to return to the show you were watching.

## Surfing Favorites

1. Once you have set up your **Favorite Channels** using one of the methods above, you can surf through them easily. Press **FAV** to jump right to your **Favorite Channels**.
2. Each time you press **FAV**, you will jump to the next Favorite Channel on your list.