

## Control Live TV

With the DVR (Digital Video Recorder), you can use your Digital Remote to control live TV — just as if it were a recording.

### How does it work?

1. If you're interrupted, or want to take a break — all you have to do is press the **PAUSE** button.
2. When you're ready to go back to your show, press **PLAY** button to pick up where you left off.
3. To watch in slow motion, press **PLAY** twice very quickly.
4. Use **REWIND** and **FAST FORWARD** to control the action, just like you would with your VCR. Press these buttons twice to go faster, or three times to go at the fastest speed.

## Extra Tips

1. If you come home late, you can still catch your favorite show, as long as your Digital SmartBox was tuned to the right channel. Your DVR automatically stores up to an hour of the show. Just press **REWIND**, and you can play any part of the last hour you've missed.
2. If you are watching live TV, and want to watch an instant replay of something, just press **INSTANT REPLAY**. This will rewind 10 seconds and play what you just watched again.