

## Watching Saved Shows

Any time you want, you can watch a show you've recorded. With the DVR, you can even start watching a show from the beginning when you're in the middle of recording it!

1. Press **LIST** to see your list of saved shows.
2. Use **UP/DOWN** arrows to browse the list.
3. When you find the program you want, press **SELECT**.
4. The following list of options will pop up:
  - **Play** - Start watching your show
  - **Erase** - Erases your show
  - **Keep Longer** - Use this to arrange the priority of shows you have saved. Shows highest in the list will be saved the longest.

- **Save Until Manually Erased** - Use this for your most important shows. They won't be erased until you manually erase them yourself.
- **Record Options** - This gives you more options for managing your show list.

5. To watch a show use the **UP/DOWN** arrows to choose **Play** then press **SELECT**. Note: If you have already watched part of a show, you will be given the option to **Play From Beginning** or **Resume Playback**.

**Tip:** Even if a show is currently in progress, you can watch it from the beginning, right then and there, by following the steps above.

6. Once the program begins, you can use **PAUSE**, **PLAY**, **FAST FORWARD** and **REWIND** as you would a VCR.

**Tip:** To rewind or fast forward at different speeds, try pressing these buttons once, twice or three times for the fastest speeds.