

TV Button

Press **TV** on your Digital Remote to turn the TV on or off.

CBL (Cable) Button

Press **CBL** on your Digital Remote to turn the Digital SmartBox on or off. This will also turn your TV picture off.

Tip: Generally, we recommend turning off your TV with the TV button. If you use the CBL button, there may be a slight delay when you turn your TV back on.

Changing Channels

1. There are several ways to change channels:
 - a. You can enter a channel number on your Digital Remote and press **SELECT** button. If you do not press **SELECT**, your TV will still switch to that channel after a few seconds.
 - b. You can also channel surf, one channel at a time, with **CH+/-**.
2. Whenever you want to go back to the last channel you were on, just press **LAST**.

Volume

1. Press **VOL+/-** to increase or lower the volume of your TV.
2. Press **MUTE** to turn off the sound completely. When you want to restore the sound, just press **MUTE** again.